

AW2125 / AW2130 Instruction

Features:

- 4 digit user's code
- Easy and simple to enter a user's code
- Changeable Master Code system
- Paralysis system against the attempts by wrong codes
- Two anchoring bolts for securing on wall or on floor
- Easy outside battery loading and change
- Spacious enough for a laptop computer up to 15.4"



How to ENTER Your code ?

- Step 1 : Push Memory Button **M** on door back (LED flickers with Bi sound)
 Step 2 : Enter Your Code (4 digits min to 16 digits max)
 Step 3 : Push Finish Button **#** (Melody rings)

⚠ Caution : To confirm if your code is entered exactly, check the opening procedures prior to closing door. In case of your code 2 0 0 7, push buttons **C 2 0 0 7 #**. If the code is properly entered, melody rings four seconds.

How to OPEN ?

- Step 1 : Push Start Button **C** (LED flickers with Bi sound)
 Step 2 : Push your code (LED flickers with Bi sound)
 Step 3 : Push Finish Button **#** (Melody rings)
 Step 4 : Turn Knob clockwise and Pull Door while Melody rings

⚠ In case of wrong codes tried over 5 times, the EDL gets frozen.
 To release it from paralysis, proceed opening procedures twice consecutively.
 Ex) In case of your code 1 2 3 4, push buttons **C 1 2 3 4 # C 1 2 3 4 #**

How to CLOSE ?

- Proceed opening steps, and close door and turn knob counter-clockwise while melody rings.



SPECIFICATION

Model	Height	Width	Depth	Weight	Volume
	(mm/inch)			(kg/lbs)	(ℓ / cu ft)
AW2125	250	360	315	13	21
	9.8	14.2	12.4	28.6	0.74
AW2130	250	360	435	16	32
	9.8	14.2	17.1	35.2	1.13

• Depth Includes Key-Board : 25mm