

Push Knob with Latch

Color/Finish

Brushed
Nickel

Chrome

DESCRIPTION

This push knob functions as a handle while unlocked. Once the door is closed, pushing in the knob activates and secures the latch so that the door will not open until the knob is pushed again.

Suitable for left and right side uses.

ADVANTAGES AND BENEFITS

Suitable for left and right side uses.

AVAILABLE PRODUCTS

| Product # | Color/Finish |
|-----------|----------------|
| 51003195 | Brushed Nickel |
| 51003140 | Chrome |

TECHNICAL SPECIFICATIONS

| | |
|------------------|------------------------|
| Width | 1 3/16 in* |
| Depth | 1 13/32 to 1 21/32 in* |
| Height | 2 1/32 in* |
| Hole Size | 31/32 in* |
| Center to Center | 25/32 in* |
| Material | Plastic |
| Door Thickness | 23/32 to 15/16 in* |

Disclaimer

Measures shown with an asterisk (*) have been converted as per your preference. These are not the official measures. To view the measures specified by the manufacturer, [click here](#).

APPLICATION

Ideal for mobile applications including boats, caravans, and mobile homes.

IMPORTANT INFORMATION

For 18-24 mm panel.

INCLUDED PRODUCT(S)

Four screws and one striker plate

PRODUCT PHOTOS

