




Critical Dimensions

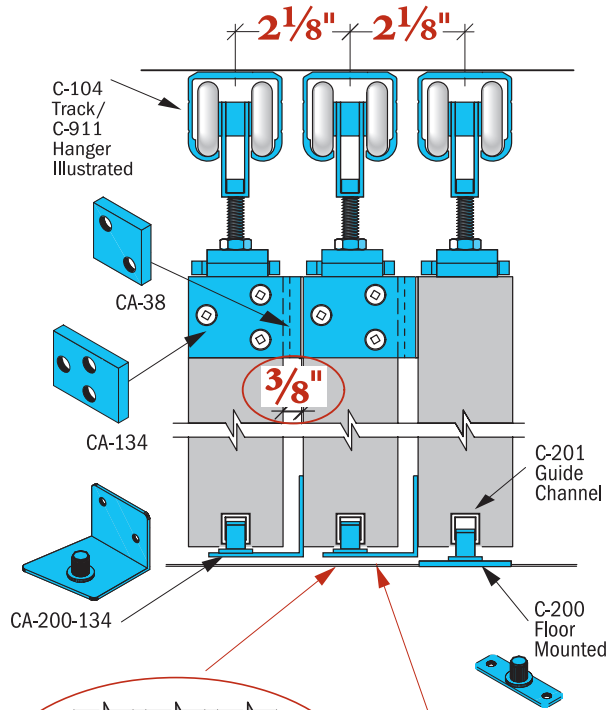

CA-200 Bracket,
when used, must
be installed directly
below CA-38 bracket,
as illustrated

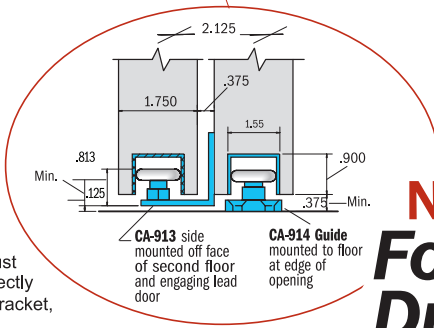

NEW
**For Heavy
Duty Doors**