




Tool-free installation

ORGA-LINE divider sets for TANDEM drawers are easily installed without tools. The spring-loaded components fit into the drawers snugly and the connector pieces are assembled with dovetail slots.


Tray sizes

ORGA-LINE kits have trays in three lengths. Most cutlery kits come with five triple length trays. Other kits may have double or single length trays included.

Triple tray






Double tray

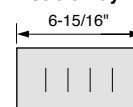

Single tray




ORGA-LINE kit assembly

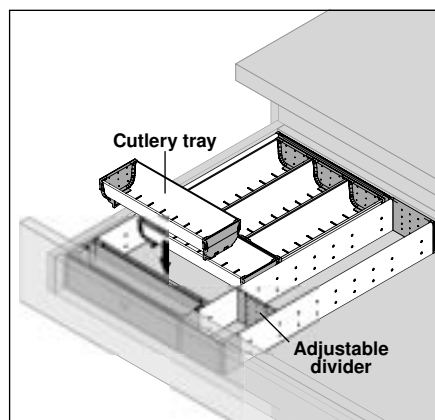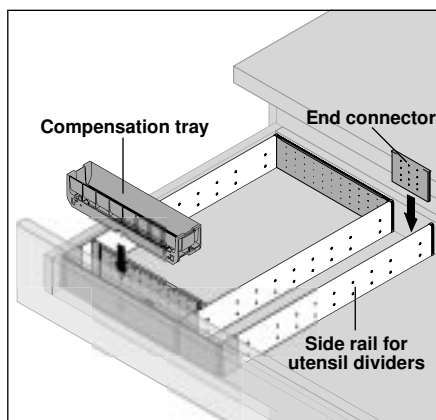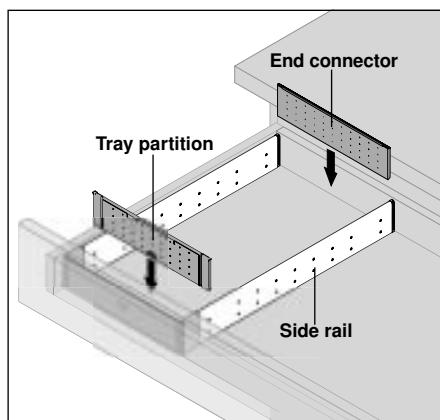

1. Place spring-loaded side rails in drawer and join them with the end connectors.
2. Install the tray partition in the first set of holes on the side rail.
3. If applicable, install additional side rails and end connectors for utensil dividers.
4. Place the spring-loaded compensation tray between the tray partition and the end connector.
5. Insert the cutlery trays in any desired configuration.
6. Install the adjustable divider in the utensil section.

Tray configurations

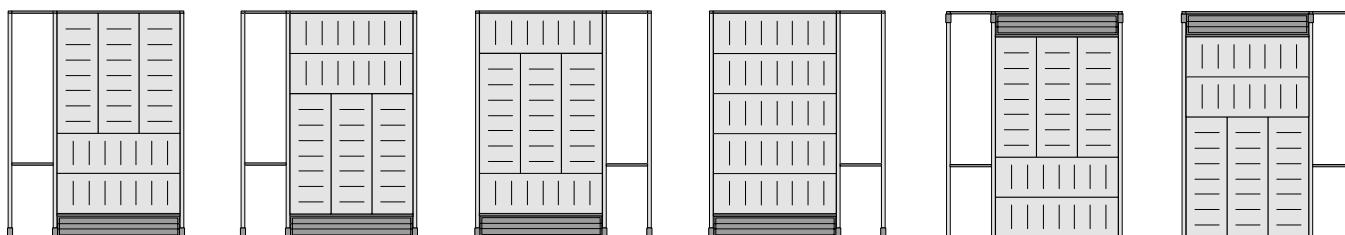

Cutlery tray kits can be arranged in various configurations. The compensation tray can be positioned in front or back (example ZHI533KI4A).